

FunTime

Carnival Style

4oz Hot Oil Popcorn Machine

 


FT421CR/**FT421CB**
INSTRUCTION MANUAL
(FOR AC 120V/60HZ)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
2. Do not touch hot surfaces. Always use handles or knobs to operate.
3. To avoid any risk of electrical shock, do not immerse cord or plug into water or other liquid.
4. Close supervision is necessary when it is being used by or near children.
5. Unplug main power cord from outlet while not in use and before cleaning.
6. Allow HOT parts to cool down before maneuvering.
7. Do not operate the appliance with damaged cord or plug, malfunction or with any mechanical damages. Send the unit to the nearest authorized service center for examination and repairs. (ONLY technicians should open up the unit)
8. It may cause injury by using any accessories or attachments not being provided or recommended by manufacturer.
9. Do not pop the kernel with a dry pot (without oil).
10. Do not immerge kettle set into water.
11. Kettle surface is HOT and should NOT be touched during Popping or just after used.
12. Unplug, clean and cover the unit and store into dry and safe place if not being use for a long time.
13. Do not leave power cord hanging over edge of table or counter or touch with any hot surfaces.
14. Do not place the unit on or near a hot gas or electric burner or in a heated oven.
15. Extreme caution must be paid when moving the appliance containing hot oil or other hot liquids.
16. Turn ALL switches to "OFF" position before disconnecting power plug from the wall supply outlet.
17. Not recommended for outdoor use.
18. Do not use appliance for other than indicated usage.
19. To avoid overheating, always add oil and then kernel before operating.
20. Extreme caution must be paid when unloading popcorns.
Always place the unit over a counter-top so that residual hot oil or water running out will not cause burnt.
21. KEEP OUT OF REACH OF CHILDREN.
22. DO NOT CLEAN USING ANY ABRASIVE MATERIAL.
23. NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.
24. NO PARTS ARE INTENDED FOR THE DISHWASHER.

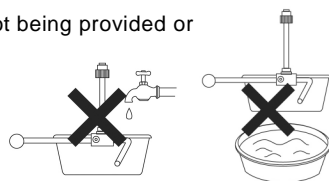

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

FT421CR/FT421CB – Voltage: AC 120V ~60Hz – Input Power -- 600W

Assembling Parts



 
Housing
PC421-105B/R



Block plate
PC421-109



Kettle
PC421-111

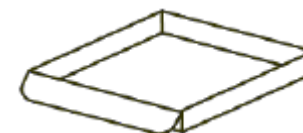

Crumb tray
PC421-110



Plastic front door
PC421-106



Back plastic panel
PC421-108



Side plastic panel
PC421-107



Lamp holder
PC421-104



Upper gear housing
PC421-102



Lower gear housing
PC421-103

Assembling Procedures:

Part 1. Assembling kettle

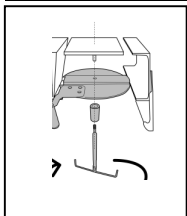 


Fig.1 Screw the lips, axle fixer and stirrer onto the gear box in clockwise.

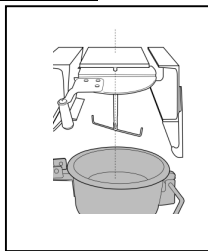 


Fig.2 Hold the kettle on the supporter.

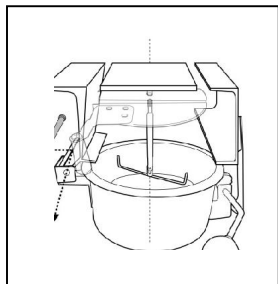 


Fig.3 Insert a pin through the kettle and supporter.

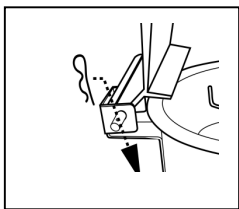 


Fig.3 Insert a pin through the kettle and supporter.


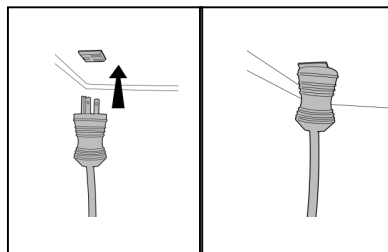 


Fig.5 Finally, insert the internal plug into the socket on the inner top

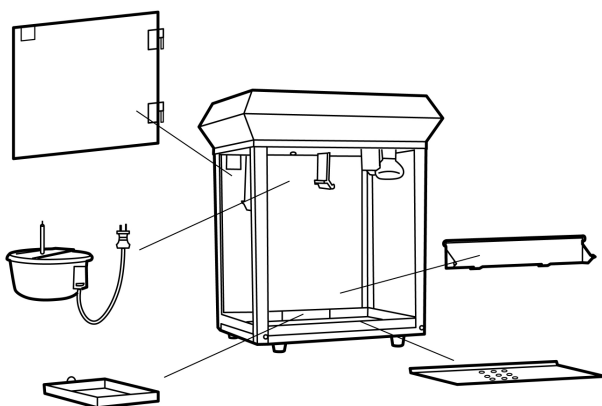 

Place the kettle (B) on the supporter and connect the socket following **Part 1.**

Assembling kettle

Put the block plate (C) on the filter.

Insert the detachable plastic door (D) on the hinge.

Insert the crumb tray (E) into the opening at the bottom of the unit.

Operation Procedures:

User should follow these procedures:

- 1) Make sure the popcorn maker is unplugged before you do any of the following.
- 2) Before using the unit, please check carefully if voltage is suitable to the country. (Please check if the voltage is matching with rating label specified next to the power cord).
- 3) Clean the internal surface of the kettle and main unit surfaces.
- 4) Main unit has 2 function switches as follows:

Light Spot light and Warmer (I)

POP Stirrer and Kettle heater (II)

Fig. 1

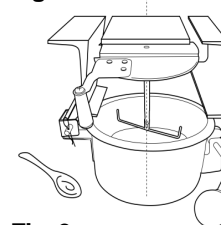 


Fig. 2


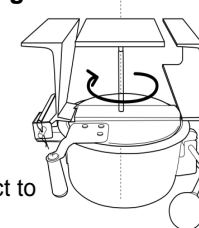 


Fig. 3

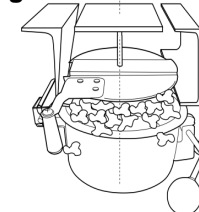 

- 5) Locate the kettle onto the supporter of the main unit.
- 6) Make sure internal plug is connecting socket and then plug in the power supply cord to the popcorn maker.
- 7) Switch on the Spot light and Warmer (I), and then fill in suitable amount of butter or oil (Fig. 1). Consumer could fill amount of oil (Max. 8g) subject to your own preference.
- 8) Kettle should be pre-heated for 3 to 4 minutes with oil (until steam comes out from the kettle). Please prepare kernels with sugar. (Measure amount of kernels by measuring scoop provided (Max. 4 oz) and amount of sugar subject to your own choice (Max. 100g), liquid sugar and honey are prohibited to be used.
- 9) Take the lid onto the magnet and then pour in pre-mixed kernel and sugar or salt.

Caution: Lid might be hot and recommend using an oven mitten.

- 10) Switch ON the Stirrer and Kettle heater (II) so that it starts stirring. (Fig. 2)
- 11) Close the door carefully.
- 12) Popcorn starts popping out through the lid after about 2 to 3 minutes. (Fig. 3)
- 13) Switch OFF the stirrer & Heater (II & III) when popping completed (No more popping sound from pot). Rotate the roller bar of the kettle and pour out all remaining popcorn from kettle.
- 14) Keep Stirrer and Kettle heater switch (II) OFF if the unit is not continuously running. Keep only the spot light and warmer ON to keep the popcorn warm, dry and tasty.
- 15) Serve your popcorn with popcorn scoop provided.
- 16) Remove plug from power supply if the unit is not being used for long time.
- 17) Repeat step 7 to 10 for continue popping.

Cleaning and Maintenance

To avoid burning excess amount of sugar from bottom of the inner pot, it is strongly recommended to clean the kettle after using 3 to 4 times.

After using the popcorn machine, users should use wet towel to clean up the main unit, main body and glasses; rubbish tray is strongly recommended to clean up frequently so that there is no bacteria.

Quick Cleaning Procedure:

Switch OFF (II & III). Pour 300 to 500 ml of water (NO detergent is necessary) into inner pot. Switch ON the stirrer (II) & heater (III) again to boil the water and let the stirrer to turn in order to remove excess amount of sugar stuck on the surface. Pour out the water after about 1 to 2 minutes of boiling. **Caution: Hot kettle!**

Repeat the same procedure 2 to 3 times to get better result.

Standard cleaning procedure:

1. Repeat the above "Quick cleaning procedure" until it's relatively clean.
2. Switch off the machine and wait for the popping pot become cold. Clean the inside and outside of the kettle by brush and wet towel. (NEVER immerse the kettle into water.)